

Paloma Parts List (For PH-24M-DP/DN)

NOTE: When ordering replacement parts, please provide the following information.

*Model No. and Type of Gas.

*Serial No.

*Parts Description and Number as shown in the parts diagram.

Part No.	Description Of Part	Part No.	Description Of Part
A	Sight Window Assy. (w/1-6,18)	122	Temperature Adjusting Spindle w/"O" Ring
B	Front Jacket Assy. (w/1 - 8,12,13,20)	128	Supporter
10	Temperature Adjusting Knob	F	Flexible Tube Assembly (w/141-144)
11	Gas Knob	142	Packing
12	Gas Adjusting Panel	143	Water Filter
13	Temperature Adjusting Panel	G	Gas Pressure Regulator Assembly & Gas Intake Valve (w/131 - 137)
20	Plate Spring	151	Over Heat Limiter w/ TLD
21	Knurled Screw	152	Round Head Screw
31	Draft Hood	153	Round Head Screw
33	Round Head Screw	154	Hex. Nut
35	Heat Exchanger Holder (L)	155	Pilot Holder
36	Heat Exchanger Holder (R)	156	Thermocouple
37	Round Head Screw	157	Electrode
38	Self-Tapping Screw	H	Pilot Burner Assembly (159)
39	Heat Exchanger Assembly	160	Round Head Screw
40	Round Head Screw	I	Sub Pilot Burner Assembly (163)
41	Packing	166	Piezo-Electric Ignitor (w/167)
42	Joint Pipe	168	Sheet Metal Screw
43	Packing	J	Main Burner Assembly (w/201-207)
44	Plate Nut	207	Orifice Holder Assenbly (w/orifices)
45	Bracket		
46	Wood Screw		
47	Back Jacket		
48	Round Head Screw		
49	Joint Pipe w/TLD Plate		
50	Packing		
101	Magnetic Safety Valve (w/102)		
104	Gas Knob Connector		
C	Gas Control Valve Assembly (w/101- 103,166,167)		
107	Spindle		
108	"O" Ring		
109	Round Head Screw		
D	Water Control Case Assembly (w/107-111)		
111	Slow Ignition Valve (w/O-ring)		
112	Diaphragm		
E	Water Control Body Assembly (w/116,117,121—123)		
116	Venturi Tube (w/O-rings)		
117	Water Regulator		
120	Hexagon Nut		
121	Drain Valve w/"O"Ring		

Schematic Disassembly for PH-24M-DP/DN

